

LMProPower AirLED

User Manual



This manual is valid for:

LM-ProPower 100722

LM-ProPower 100732

LM-ProPower 100722us

LM-ProPower 100732us

LM-ProPower 100722jp

LM-ProPower 100732p

Manufacturer, Marketing and Sales

LM-Instruments Oy

PL 88 (Norrbyn rantatie 8)

FI-21601 Parainen, Finland

Telephone: +358 2 4546 400

Fax: +358 2 4546 444

E-mail: info@lm-dental.com

Internet: www.lm-dental.com

Copyright

Copyright 2015 LM-Instruments Oy. All rights reserved. The contents of this manual may be changed without notice. No part of this manual may be reproduced in any form or by any means without permission in writing from LM-Instruments Oy.

 0537

CONTENTS

1. Introduction	4
2. Safety instructions	5
2.1. Safety notices	5
2.2. Electro magnetic compatibility	6
2.3. Safety considerations to install, servicing and to repair the AirLED unit	6
2.4. Intended and prohibited use	6
2.5. Declaration of conformity	6
2.6. EMC Guidance and manufacturer's declaration.....	7
3. Content of delivery	10
3.1. Content of unit.....	10
3.2. General description.....	10
3.3. AirLED unit.....	11
3.4. Coupling and type plate.....	12
3.5. Control panel.....	12
3.6. Medicament bottle (optional).....	13
3.7. AirLED Polisher	13
3.8. Foot Control unit	14
3.9. Symbols on the equipment.....	15
4. Taking AirLED in to use	16
4.1. How to install the unit	16
4.2. How to connect the unit to the air supply.....	16
4.3. How to connect the unit for tap water (optional)	17
4.4. How to connect the unit to the supply current	17
5. Operating instructions AirLED Polisher	18
5.1. How to install AirLED Polisher to use	18
5.2. Foot control functions for Polisher.....	20
5.3. Power and working modes for Polisher	20
5.4. Air purge quick cleaning function	20
5.5. How to operate with AirLED Polisher.....	21
5.5.1. Polishing for supragingival use:	22
5.5.2. Polishing for subgingival use:	22
5.6. After AirLED Polisher treatment	22
6. Cleaning and maintenance	23
6.1. Air purge quick cleaning function	23
6.2. Automatic cleaning function.....	23
6.3. How to clean the equipment and the components	23
6.4. Recommended cleaning procedure.....	24
6.5. Maintenance.....	26
7. Troubleshooting AirLED	27
8. Technical data	29
9. Warranty	30
9.1. Warranty terms.....	30
9.2. Delivery Information.....	31
9.3. Installation check-list.....	31
9.4. Operational test.....	32

1. INTRODUCTION

Foreword

This is user manual for AirLED product. Read and understand this manual before you use the product. If there are any questions regarding the contents of this manual, please contact LM-Instruments Oy. Keep User manual in place where it is easily available for all users.

General Requirements

Special precautions are necessary to this product regarding EMC (Electro Magnetic compatibility). It is necessary to install the product and put it into servicing referred to the EMC data in chapter "2.6. EMC Guidance and manufacturer's declaration" on page 7.

Portable and mobile RF (Radio Frequency) communications equipment can have an unwanted effect on the product.

Connect the product to electricity-, water- and compressed air supply which obeys the requirements in the Technical data.

Service

Only approved service persons are permitted to do servicing to this product. The maintenance procedures which are introduced in this manual are for the user. User must obey the maintenance measures to keep safe and efficient operation of the product.

2. SAFETY INSTRUCTIONS

2.1. Safety notices

The safety notices shown on this page are used to identify safety messages in these instructions:

 WARNING	WARNING indicates a dangerous situation that, if not prevented, could cause death or injury.
---	---

 CAUTION	CAUTION indicates a dangerous situation that, if not prevented, could cause minor or moderate injury.
---	--

NOTICE!	NOTICE indicates a situation that, if not prevented, could result in material damage.
----------------	--



This general hazard symbol identifies important safety messages in this manual. Carefully read, understand and obey the messages. When you see this symbol, be alert: your and your patient safety is involved.

2.2. Electro magnetic compatibility

Special precautions are necessary to this product regarding EMC (Electro Magnetic compatibility). It is necessary to install the product and put it into servicing referred to the EMC data in the chapter “2.6. EMC Guidance and manufacturer’s declaration” on page 7. Portable and mobile RF (Radio Frequency) communications equipment can affect the product.

2.3. Safety considerations to install, servicing and to repair the AirLED unit

Connect the product to electricity-, water- and compressed air supply which obeys the requirements in the chapter “8. Technical data” on page 29. . Only persons with applicable professional knowledge are permitted to connect the unit to the air or water supply.

Only approved service persons are permitted to do servicing to this product.

In this manual are shown all the permitted maintenance procedures for the user, any other procedures are strictly prohibited. Before you do any maintenance work, read and understand maintenance instructions.

2.4. Intended and prohibited use

This LM-ProPower AirLED polisher unit is designed for dental purposes. It is designed for removal of plaque, cleaning discoloured teeth and other dental work where air polishing is beneficial. The unit must only be used by licensed dental professionals approved in the correct use of polishing devices.

Do not use LM-ProPower AirLED unit where it is not intended to. If you are unsure about your operation, please contact your local dealer or place of purchase.

2.5. Declaration of conformity

The manufacturer hereby declares that the LM-ProPower AirLED unit Class I, type B according to EN60601-1 equipped with original accessories conforms to the essential requirements of the Medical Device Directive 93/42/EEC with reference to the following harmonized standards:

IEC 60601-1, Third edition 2005 EN 60601-1: 2006.

Classification: Medical products, Class IIa:



 WARNING	Do not make modifications to this product.
---	---

2.6. EMC Guidance and manufacturer's declaration

Guidance and manufacturer's declaration - electromagnetic emissions		
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.		
Emission test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The LM-ProPower uses RF energy only for its internal function. Therefore, it's RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The LM-ProPower is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not applicable	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Not applicable	

Guidance and manufacturer's declaration - electromagnetic immunity			
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/ burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5 % U_T (>95 % dip in U_T) for 0.5 cycle 40 % U_T (60 % dip in U_T) for 5 cycles 70 % U_T (30 % dip in U_T) for 25 cycles <5 % U_T (>95 % dip in U_T) for 5 sec	<5 % U_T (>95 % dip in U_T) for 0.5 cycle 40 % U_T (60 % dip in U_T) for 5 cycles 70 % U_T (30 % dip in U_T) for 25 cycles <5 % U_T (>95 % dip in U_T) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the LM-ProPower requires continued operation during power mains interruption, it is recommended that the LM-ProPower be powered from an uninterruptible power supply or battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE U_T is the AC mains voltage prior to application of the test level.			


Guidance and manufacturer's declaration - electromagnetic immunity			
The LM-ProPower is intended for use in the electromagnetic environment specified below. The customer or the user of the LM-ProPower should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>3 V/m 80 MHz to 2.5 GHz</p>	<p>3 V</p> <p>3 V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the LM-ProPower including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance: $d = 1.2\sqrt{P}$</p> <p>$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz</p> <p>where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in metres (m).</p> <p>Field strengths from fixed RF transmitters as determined by an electromagnetic site survey,^a should be less than the compliance level in each frequency range ^b.</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			
<p>a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the LM-ProPower is used exceeds the applicable RF compliance level above, the LM-ProPower should be observed to verify normal operation. If abnormal performance is observed additional measures may be necessary, such as reorienting or relocating the LM-ProPower.</p> <p>b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.</p>			

Recommended separation distances between portable and mobile RF communications equipment and the LM-ProPower			
The LM-ProPower is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the equipment can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LM-ProPower as recommended below, according to the maximum output power of the communications equipment.			
Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2,5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23
For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.			
NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			

3. CONTENT OF DELIVERY

Carefully unpack your LM-ProPower AirLED unit and verify all accessories and components are included to the content list below. If anything is missing contact your place of purchase.

3.1. Content of unit

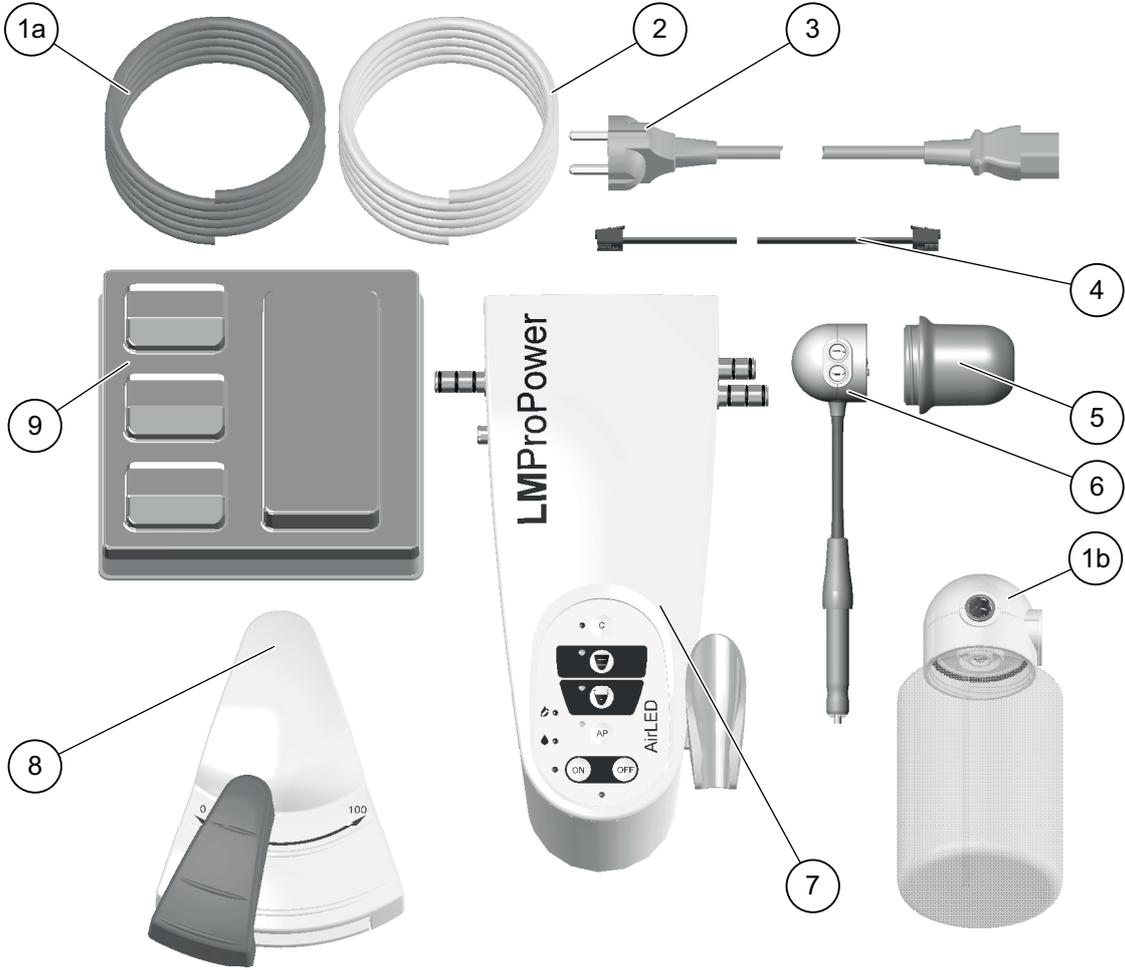


1a (*)	Water hose 6 mm (1/4")	6	AirLED tubing with handpiece
1b (*)	500 ml medicament bottle	7	LM-ProPower AirLED unit
2	Air hose 6 mm (1/4")	8	Foot control unit
3	Power cord	9	Polisher introkit (content varies depending on the order)
4	Foot control cable		
5	Powder container		

(*) depending of the type of the device

3.2. General description


LM-ProPower AirLED is an effective AirLED polisher in one versatile and ergonomic appliance. The device is equipped with LED-light that gives an optimal visibility in diagnostics and removal of discolourings and stains. Ergonomically designed LM-ErgoGrip handpieces with soft silicone handles give the user a comfortable, relaxed grip as well as an excellent feel.

3.3. AirLED unit

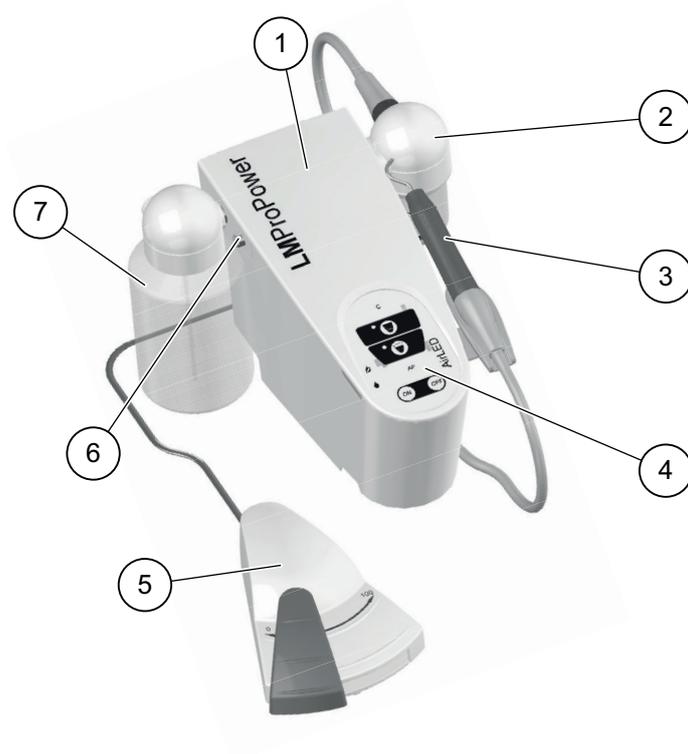

1	LM-ProPower AirLED unit	5	Foot control unit
2	Powder container	6	Depressurisation button
3	Polisher handpiece incl. tubing (with an LM-ErgoGrip and a nozzle mounted)	7	Medicament bottle
4	Control panel		


3.4. Coupling and type plate

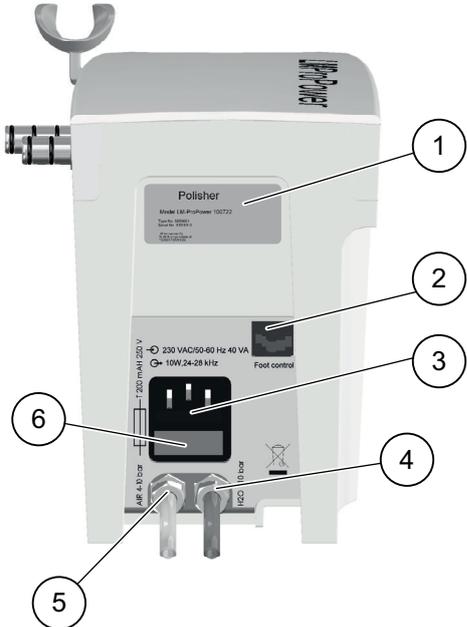

The diagram shows the rear panel of the AirLED polisher. It features a 'Polisher' label with technical specifications: 'Model: LED Polisher 10272', 'Type: 2000', 'Power: 10W', and 'Voltage: 230V'. Below this, it lists '230 VAC/50-60 Hz 40 VA' and '10W/24-28 kHz'. There are two air hose couplings labeled 'AIR 4-10 bar' and '1/2" 10 bar'. A 'Foot control' is also indicated. A fuse holder is located near the power input.

1	Type plate
2	Foot control unit connection
3	AC power input
4	Water hose coupling (optional)
5	Air hose coupling
6	Fuse holder

3.5. Control panel

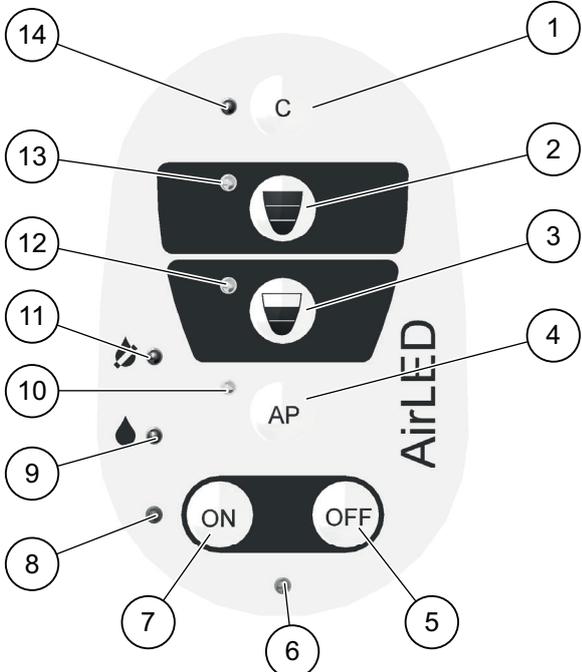

The diagram shows the control panel of the AirLED polisher. It includes a 'Cleaning key' (1), 'Working mode 3 key = 100% power' (2), 'Working mode 2 key = 60% power' (3), 'Air-Purge key' (4), 'Power OFF key' (5), 'Standby indicator' (6), 'Power ON key' (7), 'Power ON indicator' (8), 'Water-Jet mode indicator' (9), 'Air purge indicator' (10), 'Air blow mode indicator' (11), 'Working mode 2 indicator' (12), 'Working mode 3 indicator' (13), and 'Cleaning mode indicator' (14). The panel also features 'ON' and 'OFF' buttons and a 'C' indicator.

1	Cleaning key
2	Working mode 3 key = 100% power
3	Working mode 2 key = 60% power
4	Air-Purge key
5	Power OFF key
6	Standby indicator
7	Power ON key
8	Power ON indicator
9	Water-Jet mode indicator
10	Air purge indicator
11	Air blow mode indicator
12	Working mode 2 indicator
13	Working mode 3 indicator
14	Cleaning mode indicator

Content of delivery


3.6. Medicament bottle (optional)

LM-ProPower has a medicament dispenser system, making the device independent of a fixed water supply connection. The medicament bottle can be used for either medicament solutions or ordinary clean water.

Approved medicament solutions:


- Clean water
- Cetylpyridinium chloride
- Chlorhexidine
- Essential oils
- Hydrogen peroxide, 3% USP
- Povidine iodine, 10% solution
- Saline solution
- Sangurinara extract
- Sodium hypochlorite 1% solution

The unit contains an electrically driven air compressor. When operating, the compressed air forces the fluid from the bottle through the hose and to the handpiece and to the nozzle.

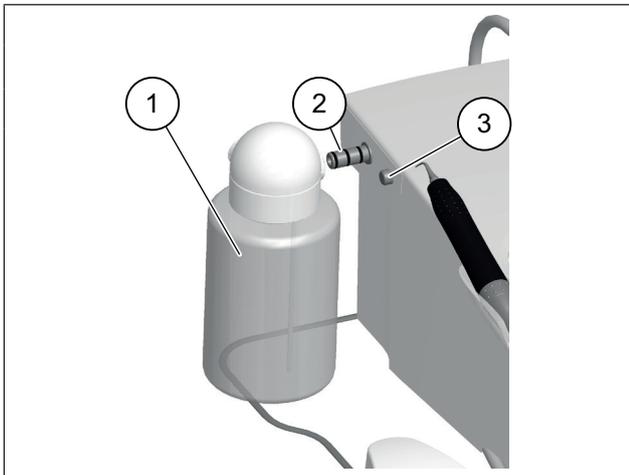


1	Medicament bottle
2	Bottle connector
3	Depressurisation button

3.7. AirLED Polisher

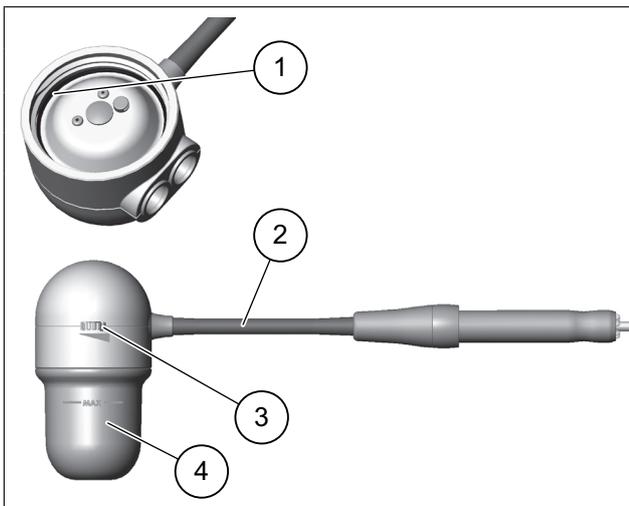

1	O-ring (mounted in cap)
2	AirLED tubing with handpiece
3	Water flow control
4	Powder container



3.8. Foot Control unit

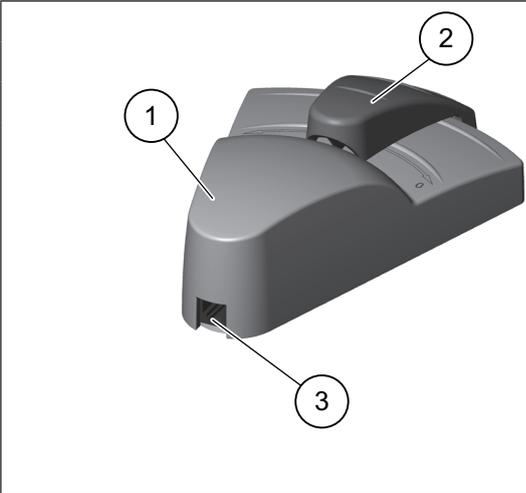

1	Foot control unit body
2	Foot control pedal
3	Connector for foot control cable

--	--

3.9. Symbols on the equipment

	Air Purge
	Working mode 2 = 60% power
	Working mode 3 = 100% power
	Water-Jet mode
	Air-Blow mode
	Automatic cleaning function
	Power ON
	Power OFF
	Example of type plate. The type plate is placed on the back side of the unit.
	Medical electrical equipment classified by ETL with respect to electric shock, fire, mechanical, and other specified hazards in accordance with the Safety Standards ANSI/AAMI ES 60601-1 and CAN/CSA C22.2 No 60601-1:08
	Caution
	Consult accompanying documents
	Compliance label indicating compliance with the Medical Device Directive 93/42/EEC. 0537 is the ID-number of the Notified Body: VTT
	Withstands autoclave temperature 135°C (275°F).
	Type B applied part according to the degree of protection against electrical shock.
	Fuse
	Input
	Output
	Please do not throw the equipment into the domestic refuse. Please use the return and collection systems available in your country for the disposal of this product. The equipment can also be returned to the manufacturer for disposal.

4. TAKING AIRLED IN TO USE

NOTICE!	The product should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the product must be observed to verify correct operation in the configuration in which it will be used.
NOTICE!	Special skills required. Consult an approved technician to connect the unit to the air and water supply.
NOTICE!	Do not put the unit on or adjacent to a heat source. Excessive heat can damage the electronics.
NOTICE!	Product is not suitable for use in the presence of flammable gases.

4.1. How to install the unit

- Put the unit horizontally with the handpieces in the holders and the hose hanging free.
- Put the unit where air is free to circulate on all sides and below it. Do not put the unit on a wall or adjacent to heat source.
- Do not put the unit in the immediate vicinity of sources of electromagnetic radiation, for example an electro surgery equipment.
- Connect the foot unit control cable to the foot control and at rear side of the unit.

4.2. How to connect the unit to the air supply

NOTICE!	Use only dry and filtered compressed air.
NOTICE!	Special skills required. Consult an approved technician to connect the unit to the air supply.

	<ol style="list-style-type: none"> 1. Set the air supply OFF. 2. Verify that the air pressure obeys to the data in the technical data section. See instructions "8. Technical data" on page 29 3. Use only dry and filtered compressed air. 4. Push the hose onto the quick connect coupling. 5. Connect the other end of the hose to the air supply. 6. Set the air supply ON. 7. To disconnect, push orange ring and pull tubing out when orange ring still is pushed in.
---	--

4.3. How to connect the unit for tap water (optional)

NOTICE!

Special skills required. Consult an approved technician to connect the unit to the water supply.



1. Set the water supply OFF.
2. Verify that the water pressure obeys to the data in the Technical data section. See instructions “8. Technical data” on page 29
3. Verify that the water supply fulfils the medical demands of hygiene.
4. Push the hose onto the quick connect coupling.
5. Connect the other end of the hose to the water supply.
6. Set the water supply ON.
7. To disconnect, push orange ring and pull tubing out when orange ring still is pushed in.

4.4. How to connect the unit to the supply current



WARNING

ELECTRICAL HAZARD! Connect the unit to an AC power outlet supplied with a protective ground. USA and Canada: The power cable and plug must be classified as “Hospital Grade”.

1. Verify that the voltage rating shown above type plate match the voltage of the AC power outlet.
2. Verify that the AC power supply is supplied with the protective ground.
3. Connect the power cable to the unit and the AC power supply. All indicator lamps illuminates for a short period when the unit does a self check.
4. The unit is standby when the green lamp is illuminated.

5. OPERATING INSTRUCTIONS AIRLED POLISHER

Indications for polishing:

- Biofilm removal and dissolution.
- To clean teeth prior to bleaching.
- To clean pits and fissures prior to sealant placement.
- To clean surfaces prior to any acid etch or bonding procedure.
- To clean orthodontically banded or bracketed teeth.
- Biofilm removal in implant maintenance therapy.

For optimal performance, use original LM-ProPower air polishing powders.

5.1. How to install AirLED Polisher to use

PREPARATIONS (BOTTLE VERSION)

1. Fill the medicament bottle with water or with approved medicament solution. Refer to the approved medicament solutions, See instructions “3.7. Medicament bottle (optional)” on page 13.
2. Turn the bottle cap onto the bottle and push it onto the connector.
3. Make sure that the unit is connected to the air supply, the power cable is connected and the unit is in standby mode, the green indicator lamp is illuminated.


NOTICE!

Tighten the powder container fully before activating the polisher.


NOTICE!

Do not activate the polisher before nozzle is installed.

Operating instructions AirLED Polisher
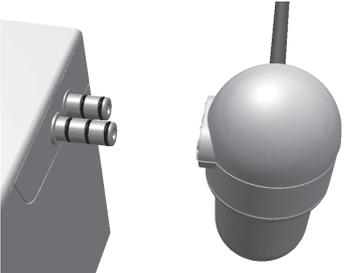
<p>A</p> 	<ol style="list-style-type: none"> 1. Unscrew the powder container from the cap and fill the powder container with LM-ProPower powder until MAX (A). NOTE: With LM-Glycine powder fill the powder container only half of the maximum to prevent too much powder consumption and dispersion. 2. Screw the container back in to the cap. 3. Connect the powder container cap to the connectors on the right side of the unit (B).
<p>B</p> 	<ol style="list-style-type: none"> 4. Bottle version: Connect the medicament bottle to the unit. 5. Carefully move the LM-ErgoGrip onto the polisher handpiece (C). 6. Screw the polisher nozzle clockwise into the handpiece until you feel a stop (D).
<p>C</p> 	<ol style="list-style-type: none"> 7. Press the key identified ON on the control panel (E) to set the polisher ON. The blue polisher indicator lamp illuminates.
<p>D</p> 	<ol style="list-style-type: none"> 8. The indicators adjacent to the working modes keys are flashing to remind that you must select a working mode. If some blue indicators are flashing alternatively, make sure that the polisher is connected. If the problem stays, refer to the trouble shooting section. Choose working mode 2 or 3 by pressing the related working mode key on the keyboard.
<p>E</p> 	<ol style="list-style-type: none"> 9. Adjust water flow for optimal performance. <ul style="list-style-type: none"> • Point the handpiece to the cuspidor and above the bowl. Push the foot switch to activate the polisher and adjust the water flow on the powder container (F).
<p>F</p> 	<ul style="list-style-type: none"> • Hold the polisher nozzle approximately 1 cm (0,4 in.) down right from the bottom of the bowl and press the foot control to activate the polisher. • Slowly reduce the water flow until the powder starts to collect on the surface as a white spot. • Increase the water flow until the spot just disappears. The air polisher is now balanced for optimum performance.

5.2. Foot control functions for Polisher

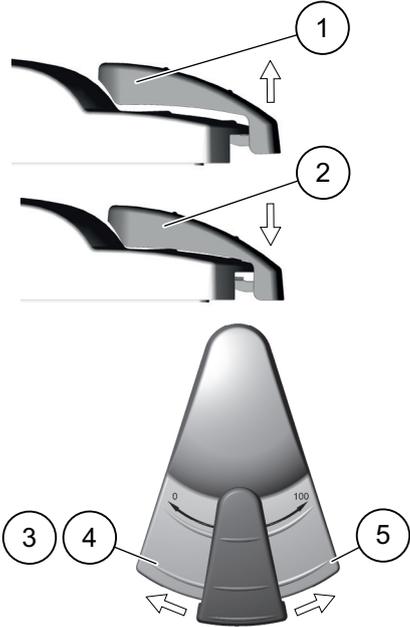


1	OFF position
2	ON position
3	Diagnostic function, turn LED light ON or OFF by a single-click on the pedal
4	Water Jet position
5	Polisher ON (Power controlled on control panel)

5.3. Power and working modes for Polisher

Polishing power

The user controls the polishing power from the control panel. Working modes 2 and 3 are possible working modes for the polisher.

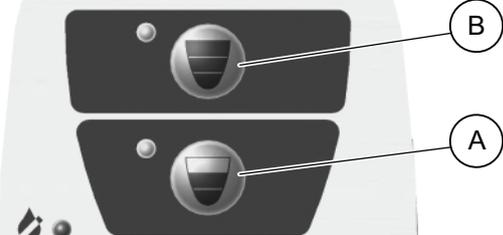

- Working mode 2 is approximately 60% of polishing power (A).
- Working mode 3 is approximately 100% of polishing power (B).

Choose correct working mode from the control panel.

- When working with a subgingival nozzle, always use working mode 2 (A).

Water-Jet cleaning

The Water-Jet cleaning mode is cleaning without powder. Select the Water-Jet cleaning mode with the foot control pressed down in the leftmost position. Only water and air comes out from the nozzle. User can also select the Water-Jet cleaning mode by pressing “ON” key three times on the control panel.

Air-Blow mode

Press one time of the “ON” key to activate the Air-blow mode for cleaning with just air.

When you press the “ON” key again and again, it will toggle between normal polishing-, Air-blow - and Water-Jet mode.

5.4. Air purge quick cleaning function

With the polisher mode active, a press on the “AP” key will air purge the handpiece for a few seconds. Air purge the handpiece after each treatment to prevent clogging. If the air purge are not performed the indicator adjacent to the C key will flash as an remainder. Running air purge resets the remind function.

5.5. How to operate with AirLED Polisher

A short learning period is required by the user, as with any new technique, until the ideal angulations, soft tissue protection and an effective treatment can be achieved

 WARNING	<p>PERSONAL INJURY HAZARD! Patients suffering from chronic respiratory disease like bronchitis or asthma must not, under any circumstances, be treated with an air polishing device. The jet of air and powder could cause respiratory difficulties.</p>
---	---

 WARNING	<p>PERSONAL INJURY HAZARD! - GLYCINE</p> <ul style="list-style-type: none"> • Predisposed persons may be sensitive to glycine. If allergic reactions are observed, stop using the product and completely remove the powder from patients mouth. • The treatment of deep periodontal pockets cause bacteraemia. Please apply appropriate restrictions for the treatment of risk patient's (general weakened immunity, endocarditis). • Do not direct the jet powder towards fillings, crowns or bridgework as this could damage these restorations.
---	--

 WARNING	<p>PERSONAL INJURY HAZARD! - SODIUM BICARBONATE</p> <ul style="list-style-type: none"> • Do not perform Sodium Bicarbonate polishing treatment for patients who: <ul style="list-style-type: none"> • have a renal insufficiency • are on sodium restricted diet • have allergic reactions to flavour containing powders (Use neutral powder instead.) • are on a long term steroid or diuretic therapy. • Do not direct the jet powder towards filling, crowns or bridgework as this could damage these restorations. • Do not direct the Sodium Bicarbonate spray onto the gingival sulcus or onto the gingival margin. Spray may cause unnecessary abrasion of the gingival tissues and / or extension of the periodontal pocketing with associated clinical complications.
---	---

 WARNING	<p>PERSONAL INJURY HAZARD! - CALCIUM CARBONATE</p> <ul style="list-style-type: none"> • Do not perform Calcium Bicarbonate polishing treatment for patients who: <ul style="list-style-type: none"> • have allergic reactions to components of the powder. • have a disease or condition that may lead to hypercalcemia. • Do not direct the jet powder towards filling, crowns or bridgework as this could damage these restorations. • Do not direct the Calcium Carbonate spray onto the gingival sulcus or onto the gingival margin. Spray may cause unnecessary abrasion of the gingival tissues and / or extension of the periodontal pocketing with associated clinical complications.
---	--

5.5.1. Polishing for supragingival use:

1. Hold the nozzle approximately 3 mm (0.12 in.) from the operating surface. Keep the jet moving constantly in small circles. Do not point it at the same spot too long time. The polisher is most effective when you point the jet downright towards the tooth although the spray should be pointed away from the gingival onto the tooth.
2. Polish only one or two teeth at a time, with frequent rinsing performed. An efficient intraoral evacuation system will prevent excessive build-up of fluid and increase patient comfort.

5.5.2. Polishing for subgingival use:

 CAUTION	<p>When you work with a subgingival nozzle, always use working mode 2.</p>
---	---

1. Fill the powder container with LM-Glycine powder for subgingival cleaning. Fill the powder container only half of the maximum to prevent too much powder consumption and dispersion.
2. Screw the LM-Sub A nozzle into the handpiece and activate working mode 2 for the lowest powder.
3. Enter the pocket and point one of the openings towards the tooth. Make sure that the mixture of water, powder and biofilm can exit freely from the pocket cleaning.
4. Constantly move the nozzle following the tooth surface. The nozzle can be moved vertically, horizontally and diagonally. In general, a few seconds of cleaning is sufficient to remove the biofilm from the pocket.
5. Set OFF the device before lifting out the nozzle from the pocket.

5.6. After AirLED Polisher treatment


NOTICE!	<p>Immediately after using any type of medicament in the medicament bottle, run the automatic cleaning cycle with clean water in the medicament bottle for both the scaler and the polisher until clean water comes out of the handpieces.</p>
----------------	---

NOTICE!	<p>Air purge the polisher handpiece after each treatment to prevent clogging.</p>
----------------	--

1. Without removing the nozzle, put the polisher handpiece above the bowl and press the “AP” on the control panel to activate air purge cleaning.
2. The polisher air purges the handpiece for some seconds.
3. After the cleaning cycle is complete, turn off the nozzle from the handpiece.
4. Clean the nozzle in an ultrasonic bath (40-50°C), for minimum 3 minutes, before cleaning/sterilization. If ultrasonic cleaning is not possible, flush the nozzle with warm water.
5. Squeeze the ErgoGrip carefully at the top and at the same time move it off the handpiece. Do not squeeze too hard at the ErgoGrip as this can make the removal difficult.
6. Remove the powder container.
7. Before removing the medicament bottle, press the depressurisation button.
8. Pull the medicament bottle from the unit.
9. Clean and sterilize the equipment/components . See instructions “6. Cleaning and maintenance” on page 23

6. CLEANING AND MAINTENANCE

NOTICE!	Immediately after using any type of medicament in the medicament bottle, run the automatic cleaning cycle with clean water in the medicament bottle until clean water comes out of the handpieces.
----------------	---

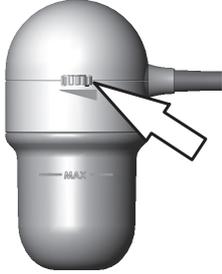	Before cleaning and sterilizing, open water flow fully open (see image).
---	--

6.1. Air purge quick cleaning function

With the polisher mode active, a press on the “AP” key will air purge the handpiece for some seconds. Air purge the handpiece after each treatment to prevent clogging.

6.2. Automatic cleaning function

NOTICE!	The automatic cleaning function must always be performed with the polisher nozzle installed in the handpiece.
----------------	--

1. Open the water control completely.
2. Put the polisher handpiece above the cuspidor bowl
3. Press the cleaning key “C” to start the cleaning cycle.
4. The cleaning cycle starts and stops automatically after 80 seconds.

6.3. How to clean the equipment and the components

NOTICE!	Do not sterilize any polisher accessories using dry heat or chemical autoclaves. This may damage the material.
----------------	---

Clean with a soft cloth and use a surface disinfectant suitable for hard plastics

	Cover and control panel
	Polisher tubing with handpiece

Clean at max 65°C

	<p>Powder container</p>
	<p>Medicament bottle</p>
	<p>Cap for the medicament bottle</p>

Autoclave in steam at 134°C (max 135°C) for minimum 3 minutes

	<p>Polisher nozzle</p>
	<p>LM-ErgoGrip Focus LED</p>

6.4. Recommended cleaning procedure

Beginning of the day

Run the automatic cleaning cycle with clean water. See instructions chapter “6.2. Automatic cleaning function” on page 23.


After each treatment

- To prevent clogging, air purge the polisher handpiece after each treatment. See instructions : “6.1. Air purge quick cleaning function” on page 23
- Run the automatic cleaning cycle. See instructions: “6.2. Automatic cleaning function” on page 23
- Clean off the cover, control panel, handpieces and the hoses with a soft cloth. Use a surface disinfectant suitable for hard plastics.
- Clean the nozzle in an ultrasonic bath (40-50°C), for minimum 3 minutes, before cleaning/sterilization. If ultrasonic cleaning is not possible, flush the nozzle with warm water.
- Clean the LM-ErgoGrip, the nozzle and autoclave according to the clinic’s routines.

Cleaning and maintenance

End of the day

- Run the automatic cleaning cycle with clean water. See instructions “6.2. Automatic cleaning function” on page 23.
- Remove and clean medicament bottle, bottle cap and powder container at a maximum temperature of 65°C.
- Clean of the powder container cap with a soft cloth. Use a surface disinfectant suitable for hard plastics.
- Empty the powder container (4) and if some stays left, clean the O-ring (1) and cap with dry compressed/pressurized air.

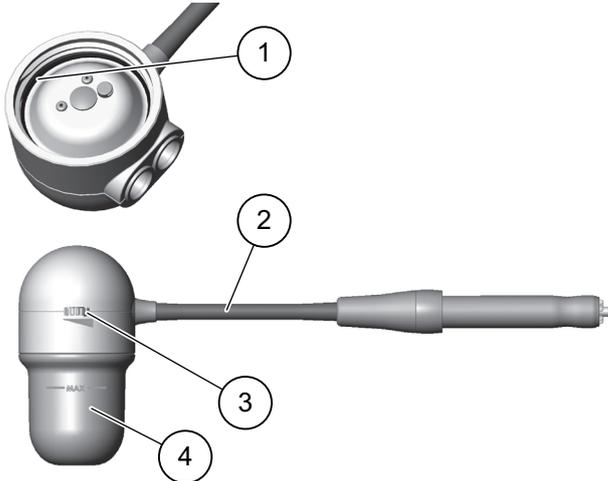

Weekly (bottle version)

- Run the automatic cleaning cycle with an anti-microbial cleaning agent solution in the bottle, see instructions: “6.2. Automatic cleaning function” on page 23. We recommend to use a separate bottle for the cleaning agent solution. Concerning exposure times of cleaning agent, follow instructions given by manufacturer.
- Before patient treatment. To flush the lines from cleaning agent solution, put clean water in the bottle and run the automatic cleaning cycle. Do automatic cleaning cycle again until clean water comes out of the handpiece.

6.5. Maintenance

NOTICE!

A petroleum based lubricant on the O-rings can decrease their durability time.


Power cable

- Do an inspection of the power cable, cables and the handpiece hose daily to ensure that the equipment is in good condition without mechanical damage.

O-rings (bottle and powder container connectors)

- Lubricate the O-rings regularly with water soluble lubricant.
- Do not lubricate the O-ring in the polisher cap.
- Clean the O-ring in the polisher cap and the cap with compressed air.

How to change fuses

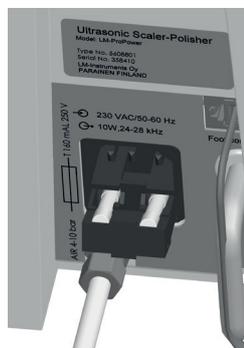

1. Disconnect the power cable from the AC power supply and the unit.
2. Open the fuse holder on the rear side of the unit.
3. Examine the fuses for damages. Replace damaged fuses with new ones. Verify the fuse specifications. Refer to the Technical data section. See section "8. Technical data" on page 29.
4. Close the fuse holder.

7. TROUBLESHOOTING AIRLED

Type of problem	See chapter
Unit does not give a result and no lights are lit on the control panell	7.1
Lights are flashing on the control panel	7.2
Difficult to remove the LM-ErgoGrip	7.3
Weak or no LED light	7.4
Control panel does not give a result when pressing the ON-key	7.5
Not sufficient or no water flow	7.6
Not sufficient or no powder flow	7.7
Water drips from the bottom of the device onto the table	7.8

7.1. Unit does not give a result and no lights are lit on the control panel

1. Make sure that the power cable is connected correctly and do a double check the voltage (120V/230V).
2. Examine the fuse and replace if necessary. See Maintenance-section of the user guide.
3. Examine that the wall outlet and the fuse panel of your clinic are OK.
4. If the problem stays – contact your dealer for support and indicate Error Code E-X02.

7.2. Lights are flashing on the control panel

Error	Action
Four blue lights on the control panel are flashing at the same time.	Make sure that the foot control cable is connected at both ends and is not damaged.
The blue light adjacent to the “ON”key is flashing alternately with three other blue lights on the control panel.	Make sure that the powder container is properly connected onto the connectors. Make sure it is pressed in all the way.
Two yellow lights are flashing alternately.	The Working Mode has not been selected. Select the working mode by pressing one of the keys adjacent to the yellow lights.
The light adjacent to the “AP”-key blinks twice and pauses.	The device reminds of the need to activate the cleaning cycle by pressing the “AP”-key. Please see user manual for details
The light adjacent to the “C” key is flashing continuously.	The cleaning function has been activated. Wait until the cleaning process has finished and the light stops flashing.

7.3. Difficult to remove the LM-ErgoGrip from the handpiece

1. Hold the LM-ErgoGrip carefully near the lens and at the same time twist and move it off the handpiece.
2. If the problem stays, replace the ErgoGrip.

7.4. Weak or no LED light

1. Examine that lens in the ErgoGrip is clear and clean. Clean or replace if necessary.
2. If you have an additional polisher tubing, try replacing the polisher tubing.
3. If the problem stays – contact your dealer for support and indicate Error Code E-P03 (“No light in polisher handpiece”).)

7.5. Control panel does not respond when pressing the ON-key

1. Make sure that the polisher tubing is connected correctly i.e. the powder container cap is pressed in all the way onto the connector.
2. Examine that the O-rings on the connector are in good condition. Replace O-rings if worn. O-rings can be lubricated with a glycerine based lubricant.
3. If you have an additional polisher tubing, try replacing the polisher tubing.
4. If the problem stays – contact your dealer for support and indicate Error Code E-X02.

7.6. Not sufficient or no water flow

1. Make sure that Air Blow mode is not activated i.e. that the blue light adjacent to the crossed-out waterdrop is not lit. If it is lit, press the ON-key.
2. Adjust water control on powder container cap to fully open.
3. If the unit are equipped with a water bottle: Make sure that the medicament/water bottle is correctly connected i.e. the cap is tightened and pushed in all the way onto the connector. Examine that the O-rings on cap and connector are in good condition. Replace O-rings if worn. O-rings can be lubricated with water soluble lubricant.
4. If the unit are equipped with a tap water connection: Make sure that the tap water hose is correctly connected to the back of the device and that the tap water system is OK (tap/valve is open and possible filter is OK).
5. Make sure that the nozzle is fully tightened.
6. If you have an additional nozzle, replace the nozzle.
7. If the problem stays – contact your dealer for support and indicate Error Code E-P04.

7.7. Not sufficient or no powder flow

1. Make sure that there is powder in the powder container and that the O-ring in the cap is in correct position.
2. If you have an additional nozzle, replace the nozzle. A clogged nozzle can be cleaned in an ultrasonic bath or in citric acid.
3. Unscrew and remove the powder container, nozzle and LM-ErgoGrip and blow with compressed air into the handpiece.
4. If the problem stays – contact your dealer for support. and indicate E-P01

7.8. Water drips from the bottom of the device onto the table

1. The LM-ProPower device has a built-in water trap that removes humidity from the pressurized air coming from the compressor in the compressor room of your clinic. The water trap condenses the humidity in the pressurized air into water which is then released below the device. Usually there is no water at all or a very small quantity (a few drops). If the quantity of water is large, the compressor of your clinic possibly needs service. Please contact the manufacturer or dealer of your compressor.

8. TECHNICAL DATA

Manufacturer	LM-Instruments Oy PL 88 (Norrbyn rantatie 8) FI-21601 Parainen, FINLAND
Model	LM-ProPower AirLED
Classification	EN60601-1: Class 1, Type B 93/42/EEC: Medical products, class IIa
L x W x H	270 x 110 x 165 mm (without bottle and powder container)
Weight	3200 g
Voltage	100 Vac, 50-60 Hz 115 Vac, 50-60 Hz 230 Vac, 50-60 Hz
Primary fuse	T500 mA, 250 V, Ø5x20 mm (100 Vac) T400 mA, 250 V, Ø5x20 mm (115 Vac) T200 mA, 250 V, Ø5x20 mm (230 Vac)
Power cable	Separate with protective earth plug
Power consumption	Max. 40 VA
Ambient temperature	Transport and storage -40°C to 70°C (-40°F to 158°F) Operation 10°C to 40°C (50°F to 104°F)
Relative humidity	Transport and storage 10% to 100% Operation 10% to 95%
Water supply pressure (version conn. to tap water)	1 - 10 bar (0.1–1.0 MPa, 14.5–145 PSI)
Water consumption	10 - 50 ml/min
Bottle volume (bottle version)	500 ml
Air supply pressure	4 - 10 bar (0.4 - 1.0 MPa, 58 - 145 PSI) Use only dry and filtered compressed air.
Air consumption	Max. 20 l/min
Powder container capacity	40 g

9. WARRANTY

9.1. Warranty terms

The following warranty terms apply to the sale of LM-Instruments Oy's products (hereinafter "Products") to a purchasing company or individual by LM-Instruments Oy (hereinafter "Manufacturer").

Manufacturer here by warrants that the Products will be free from defects arising from faulty materials or workmanship for a period of twenty four (24) months from the date of purchase by a customer from Manufacturer's authorized dealer (hereinafter "Authorized Dealer"). The warranty period is exceptionally three (3) months for products with a life inherently shorter than 24 months due to normal wear and tear, for example tips of ultrasonic scalers, tips of endodontic.

This warranty shall not apply to Products or parts thereof; which have been subject to abuse, misuse, negligence or accident or are not connected to proper power supply; to which any modification, alteration or attachment has been made without written consent of the Manufacturer; or which are installed or operated violating instructions for installation, use and maintenance; which are normally consumed in operation.

The sole and exclusive remedy under this warranty shall be limited to correct or circumvent the errors or to repair or replacement of defective parts of Products by the Manufacturer, EXW Manufacturer's factory, providing that a written claim of the defect is sent to the Manufacturer within the warranty period and the original part is returned to Manufacturer's factory by the Authorized Dealer, and Manufacturer's inspection establishes the existence of such a defect.

The customer must contact the Authorized Dealer from whom the products were purchased to request repair or replacement under this warranty and a written claim of the defects and send the original Product the Authorized Dealer.

This warranty is void if service or repair is performed by persons not authorized by the manufacturer.

Any Products not manufactured by the Manufacturer, carries only such warranty, if any, as given by any manufacturer thereof.

This warranty is the Manufacturer's only warranty in respect of the Products and the Manufacturer disclaims all other warranties, whether of merchantability, fitness for particular purpose or otherwise, guarantees and liabilities, express or implied, arising by law or otherwise. In no event shall the Manufacturer be liable for any general, consequential or incidental damages, loss of use or loss of profits by reason of the manufacturer's negligence or otherwise in connection with the sale, delivery, installation, repair or use of the Products.

The Manufacturer shall have no liability whatsoever to the Authorized Dealer or customer or any other person for or on account of any injury, loss or damage of any kind or nature, sustained by, or any damages assessed or asserted against, or any other liability incurred by or imposed upon the handling, use, operation, maintenance or repairs of Products by anyone other than the Manufacturer. This exclusion of liability does not apply pursuant to the laws on product liability in case of personal injury and property damage to privately used objects resulting from the Products.

Warranty

9.2. Delivery Information

Device Model	LM-ProPower AirLED
Water connection	Bottle / Tap water connection
Device Serial Number	
Purchase order number	
Order date	
Delivery date	

Installation information

Installation done (date)	
Installation done by (person)	
Installation location (address)	
Installation location (building and room number)	

9.3. Installation check-list

Task	Description	OK	Initials	Date
Visual check	Delivery packing was undamaged			
Content of delivery	All the devices and part were according to the section “3. Content of delivery” on page 10			
Visual check	All the parts were intact			
Mains connection	Mains supply is in compliance with back panel label information (picture in section 3.5) voltage: ____ V, ____ Hz			
Air supply	Air pressure ____ is according to specification 4-10 bar (0.4 – 1.0 MPa).			
	Compressed air is dry and medical grade			
	Air connection is close-knit and no indications of leakage is seen or heard			
Water supply (bottle model)	Bottle filled with clean water, and bottle in place according to instructions in section 3.7			
Water supply (tap water model)	Tap water pressure is ____, and according to the specification 1-10 bar (0.1 – 1.0 MPa).			
	Water connection is close-knit and no indications of leakage is seen or heard			
Foot control	Cable connected to the main unit			
Polisher container	Filled with LM-ProPower powder and connected to mains unit according to the instructions in section “5.1. How to install AirLED Polisher to use” on page 18.			
Polisher handpiece	ErgoGrip and nozzle assembled according to the instructions in “5.1. How to install AirLED polisher to use” on page 18			

Instrument assembly is now ready for the operational test

9.4. Operational test

Additional equipment needed: Artificial denture, cup for water flow, timer.

Task	Description	Pass/fail	Initials	Date
Connect cable to mains	Green standby light is illuminated			
Turn the device on	Press "ON" on the control panel. Power on indicator is illuminated			
Test Polisher	Select working mode 2 and test polishing on the artificial denture.			
	Select working mode 3 and test polishing on the artificial denture			
Test water-jet cleaning	Select water-jet mode by pressing "ON". Test water-jet cleaning on the artificial denture.			
Test diagnostic function	Set LED on and off with the foot pedal.			
Test Air-Blow mode	Select air-blow mode by pressing "ON". Test air blow on the artificial denture.			
Test Air Purge function	Select polisher mode by pressing "ON" on control panel. Press AC on control panel and record function.			

After all the above mentioned tests are passed the instrument is ready for the routine operation.

LM Dental

LM-Instruments Oy
PL 88 (Norrbyn rantatie 8)
FI-21601 Parainen, Finland
Tel. +358 2 4546 400
Fax +358 2 4546 444
info@lm-dental.com
www.lm-dental.com



User manual language versions available at
materialbank.lm-dental.com